



FAULT

When lit system is in fault condition due to low water flow, or low pressure sensor on polymer line. Switching from "AUTO" to "Manual" and back to "AUTO" resets fault condition.

MANUAL/AUTO

When in "MANUAL" water valve is opened and polymer pump is started by switches on panel. When in "AUTO" system is controlled by level controls in storage tank or remote start/stop relay.

WATER

Opens water valve when system is in manual.

POLYMER

Turns on polymer pump when system is in manual.

AGITATOR

Turns on tank agitator when switch is placed to "ON" position. When switch is placed in "AUTO" agitator will turn on whenever tank is filling and will run for 1/2 hour after tank fill cycle is complete.

SOLUTION CONCENTRATION

Adjusts speed of the polymer injection pump. Digital readout is scaled to display the percentage of polymer to water. (Example: .25 on display = .25% or .0025 polymer to water concentration.)